

Side Control Roller Blinds - Child Safety

Cord Cleat

For the installer

Cord cleat should be fixed by two screws in a safe position, not accessible to children.

Always attach a Safety Warning Tag

For the consumer

Always wrap the chain or chains around the cleat after use.



Cord Tidy

For the installer

Split cord tidy, put chain into the male section, insert female section into this. Keep cords and chain taught, fix to wall or window frame at side of the blind. **Always attach a Safety Warning Tag**

For the consumer

Always ensure that the chain remains housed within the cord tidy.



Bell Toggle

The chain loop can be split and the bell toggles attached to each end of the chain.



Easybreak™ Connector


For the installer

Join operating chain by last ball of each end into the larger holes on each side of the connector.


When blind is raised, connector should be at top of the blind on the chain length nearest the window. **Always attach a Safety Warning Tag**

For the consumer

If any reasonable weight is placed within the loop, the Easybreak™ connector will break apart. To re connect, check connector is not damaged, then insert the end of the ball chain into larger hole in the connector. Push home leaving the chain in the same position as before. Connector should be at the top of the blind, on the side of the chain nearest to the window when blind is raised.

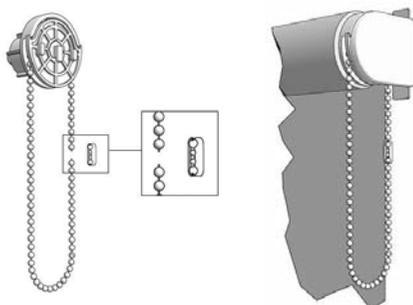

LOUVOLITE

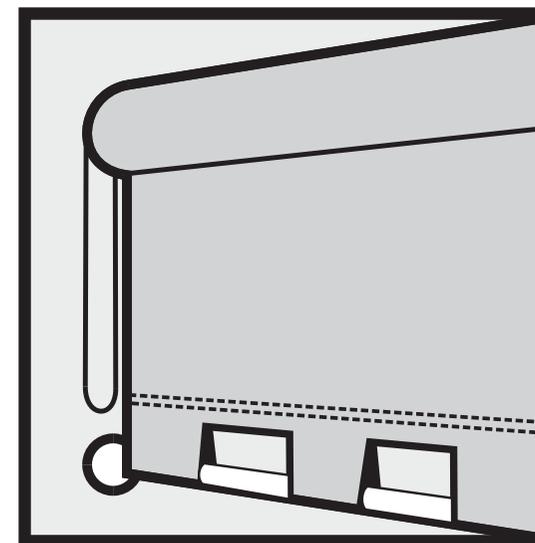

SC Series™ Roller Blind

Fitting and Operating Instructions
for Systems 40® and 45®

Before attempting to fit your window blind,
please read the instructions carefully.

WARNING

Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings. They can also wrap cords around their necks. To avoid strangulation and entanglement, keep cords out of the reach of young children. Move beds, cots and furniture away from window covering cords.




"Complete elimination of the strangulation risk can only be achieved by keeping cords, chains, and tapes and similar out of the reach of children. Use of additional safety devices may reduce the risk of strangulation but cannot be considered foolproof ... Persons in charge of children are ultimately responsible for following the safety instructions provided by the manufacturer." EN 13120

Louvolite, Ashton Road, Hyde, Cheshire SK14 4BG

Telephone: 0161 882 5000 Fax: 0161 882 5009 Email: sales@louvolite.com www.louvolite.com



Blinds with Side Control Chain

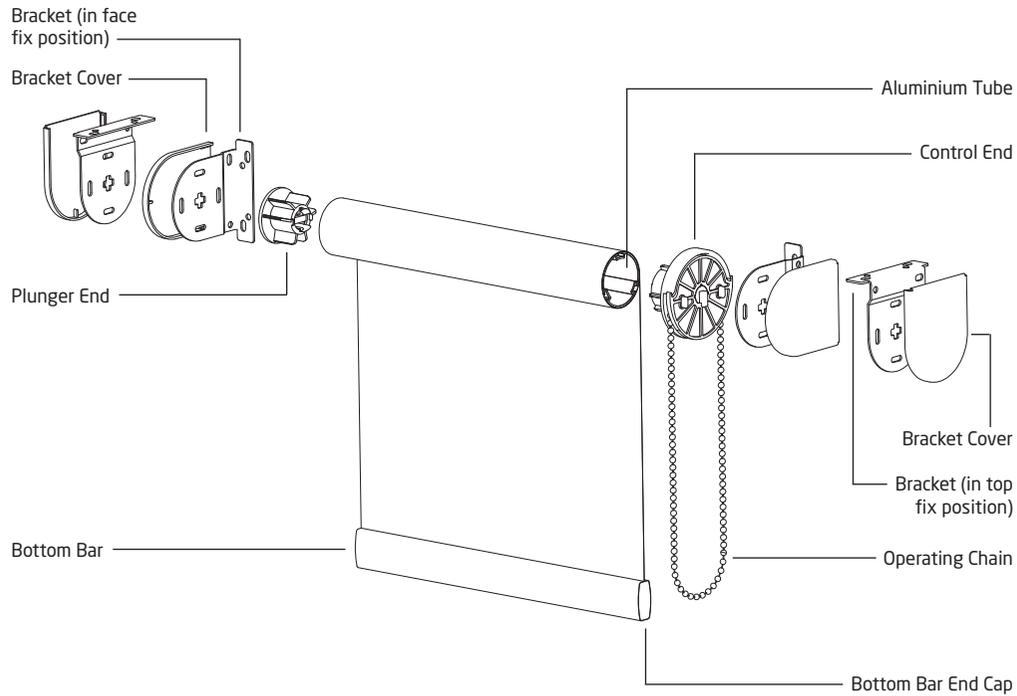

Fitting the Brackets

The bracket positions illustrated are for a blind with the control chain on the right hand side of the blind. Brackets can be top, side or face fixed to any flat surface. They must be level to ensure the smooth operation of the blind. Check that the rolled up fabric will not touch any surface. To calculate the spacing between the brackets, add 35mm (1³/₈") to the width of the blind fabric. Fix the brackets so that the outsides of the brackets are this distance apart.

Control End View

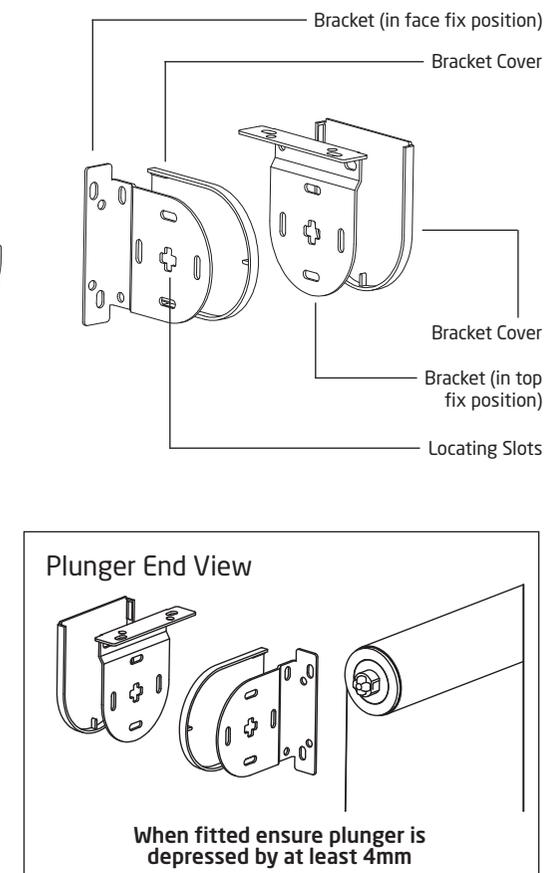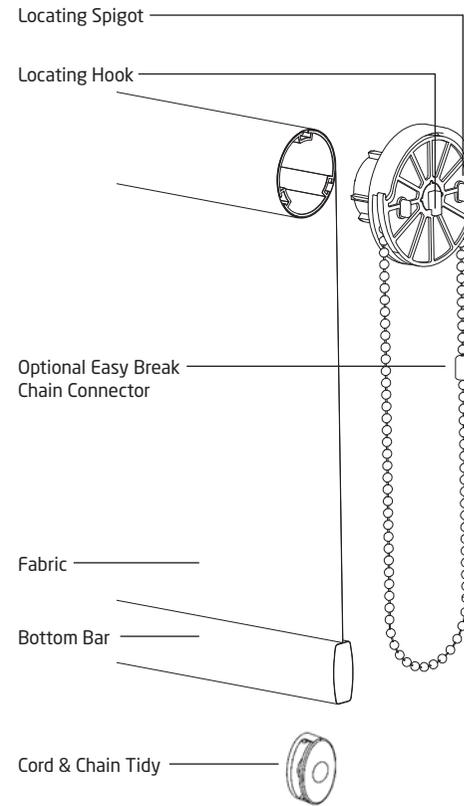

Fitting the Blind

Hold the blind to the brackets with the fabric hanging from the back of the blind. Fit the spring plunger into its bracket and push the blind into the bracket, depressing the plunger. When fitted ensure that the plunger is depressed by at least 4mm. With the locating hook pointing downwards, place the control end into the vertical part of the '+' shaped hole in the bracket. Allow the hook to drop downwards so that it locks into place in the bracket.

IMPORTANT

Please read the child safety information attached to your blind.